


USB to JST-GH 6 pin cable

Includes:

- 1 x USB to JST-GH 6 pin cable (0.5 meter)

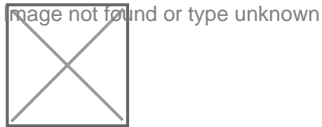

[More info about the product!](#)



USB to JST-GH 6 pin cable SKU is: AS-CAB-USBA-0M5-JSTGH6-00

Get a discounted bulk price on this product for orders of 50 units or more. Contact us at info@ardusimple.com to get a quote.

Description

On one side USB to connect to your PC, on the other side JST-GH 6pin to connect to your ArduSimple board. Useful to:

- Recover ZED-F9P boards with deleted firmware or disabled native USB interface.
- Have a second USB interface on your ArduSimple board
- Connect u-center and another software (like RTKlib) at the same time.

Alternatively, you can use this cable to configure any 6-pin Pixhawk peripheral that you have (like GPS, telemetry unit, etc). Don't connect this cable to a Pixhawk autopilot, as both Pixhawk and the cable will try to give power to each other.

This product is like a TTL to USB adapter (or FTDI to USB adapter), but ready to plug onto our board instead of soldering cables.

USB to JST-GH 6 pin cable includes free basic technical support. Contact info@ardusimple.com for more information.

Data and descriptions in this document are subject to change without notice. Product photos and pictures are for illustration purposes only and may differ from the real product appearance.